




TORCIA LASER EVO

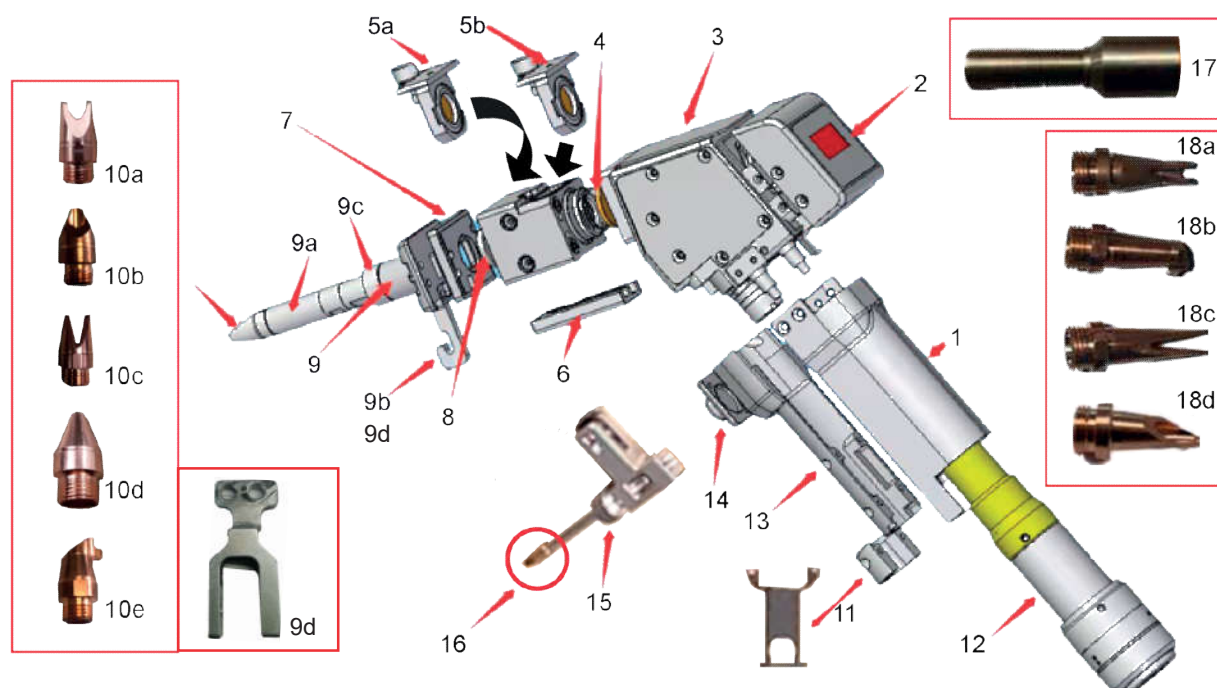

POSIZIONE	CODICE		DESCRIZIONE
	PER TORCE V10	PER TORCE V11-V20	
1	JL-HAN	JL-HAN	Manico
2	JL-TLCD	JL-TLCD	Schermo LCD torcia
3	JL-CT	JL-CT	Corpo torcia
4	JL-TLF	JL-TLF	Lente focus
5	JL-TLP	JL-TLP	Lente di protezione
6	JL-BA	JL-BA	Base
7	JL-S07	JL-S07	Supporto 07
8	JL-S08	JL-S08	Supporto 08
9	JL-NAP	JL-NAP	Supporto tubo ugello
9a	JL-TU	JL-TU	Tubo ugello
9b	JL-WFF	JL-WFF	Staffa per trainafile
9c	JL-RING	JL-RING	Anello
9d			Staffa per trainafile V20
10a	JL-TNF	JL-TNF	Ugello torcia per piano
10b	JL-TNI	JL-TNI	Ugello torcia per interno
10c	JL-TNE	JL-TNE	Ugello torcia per esterno
10d	JL-TNC	JL-TNC	Ugello torcia per taglio
10e	JL-TNW08	JL-TNW08	Ugello torcia per filo 0,8
	JL-TNW10	JL-TNW10	Ugello torcia per filo 1,0
	JL-TNW12	JL-TNW12	Ugello torcia per filo 1,2
	JL-TNW16	JL-TNW16	Ugello torcia per filo 1,6
11	JL-TWFFHA	JL-TWFFHA	Supporto Trainalo
12	JL-TLC	JL-TLC	Lente di collimazione
13	JL-IMP	JL-IMP	Impugnatura
14	JL-SW	JL-SW	Switch
15	JL-TWFF	JL-TWFF	Fissaggio per trainalo
16	JL-TWFFN08	JL-TWFFN08	Ugello uscita filo 0,8
	JL-TWFFN10	JL-TWFFN10	Ugello uscita filo 1,0
	JL-TWFFN12	JL-TWFFN12	Ugello uscita filo 1,2
	JL-TWFFN16	JL-TWFFN16	Ugello uscita filo 1,6
17		JL-TU-AS	Tubo porta ugello AntiSplash
18a		JL-20004985	Ugello AntiSplash filo esterno
18b		JL-20004986	Ugello AntiSpash filo Flat
18c		JL-20004982	Ugello AntiSplash Laser per esterno
18d		JL-20004983	Ugello AntiSplash filo interno